





## TWO GROUPS OF TOOLS

### Layout tools

These tools enable:

- ▶ rapid and accurate layout of borehole symbols on the top view and longitudinal profile;
- ▶ calculation and import of boreholes locations on a project axis;
- ▶ automatic layout of borehole logs.

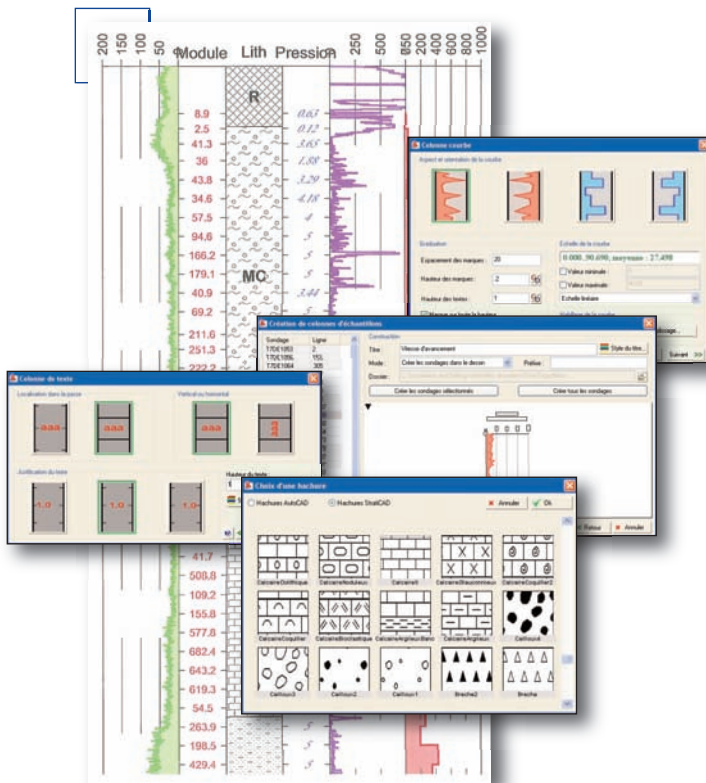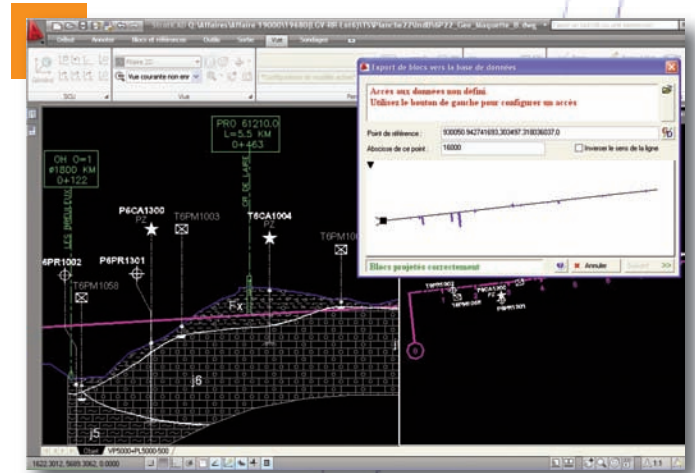

### Borehole log creation tools

These tools provide numerous options for the clear display of data:

- ▶ text and level columns;
- ▶ hatching columns;
- ▶ curve columns;
- ▶ columns associating texts and curves, or hatching and curves;
- ▶ columns including symbols.

Once preferences have been set, **Straticad** generates a unique Autocad "block" for all or some of the database boreholes depending on the user's instructions. This "block" may be saved within the CAD drawing or shared on a server.

### Minimum hardware requirements

PC-compatible computer including:

- USB port
- Microsoft Windows® XP/2000/2003/Vista/7
- Autocad LT® versions 2000 to 2010 or Autocad® versions 2000 to 2010
- Excel® version 2003 or 2007 or Access® version 2003 or 2007 or Open Office® version 3.1



Immeuble Hélios  
72, avenue Pasteur  
93108 Montreuil Cedex  
France

Tel. : + 33 (0)1 49 88 24 42  
Fax : + 33 (0)1 49 88 06 66

www.terrasol.com  
software@terrasol.com